

PROGRAMMING THE REMOTE TRANSMITTER (KEYFOB)

Storing transmitter codes.

The codes of up to three transmitters can be stored into the keyless receiver unit memory. (If a fourth code is stored, the code which was first input will be erased.)

NOTE: It is important to maintain the time limits between the steps. Make sure the doors, the hood and the trunk lid are closed. The symbol (II) denotes the on position of the key where the double I (II) symbol is stamped on the ring surrounding the ignition lock.

1. Turn the ignition switch ON (II)
2. Within 1 to 4 seconds, press the transmitter lock or unlock button with the transmitter aimed at the keyless receiver unit behind the driver's side of the dashboard.
3. Within 1 to 4 seconds, turn the ignition switch OFF.
4. Within 1 to 4 seconds, turn the ignition switch ON (II).
5. Within 1 to 4 seconds, press the transmitter lock or unlock button with the transmitter aimed at the keyless receiver unit behind the driver's side of the dashboard.
6. Within 1 to 4 seconds, turn the ignition switch OFF.
7. Within 1 to 4 seconds, turn the ignition switch ON (II).
8. Within 1 to 4 seconds, press the transmitter lock or unlock button with the transmitter aimed at the keyless receiver unit behind the driver's side of the dashboard.
9. Within 1 to 4 seconds, turn the ignition switch OFF.
10. Within 1 to 4 seconds, turn the ignition switch ON (II).
11. Within 1 to 4 seconds, press the transmitter lock or unlock button with the transmitter aimed at the keyless receiver unit behind the driver's side of the dashboard.
12. Confirm you can hear the sound of the door lock actuators within 1 to 4 seconds, then push the transmitter lock or unlock button again, or the code will not be stored.
13. Within 10 seconds, aim the transmitter (up to two additional ones) whose codes you want to store in the keyless receiver, and press the transmitter lock or unlock buttons. Confirm that you can hear the sound of the door lock actuators after each transmitter code is stored.
14. Turn the ignition switch OFF, and remove the key.
15. Confirm proper operation with the transmitters.

NOTE: Once the programming mode is entered, the remote button must be pressed a second time. If the button is not pressed, or if the ignition switch is turned OFF, the programming for all remotes will be cancelled.